

SRA5108 – KRA5108

PORTAPACCO SPECIFICO – SPECIFIC HOLDER – PORTE-PAQUET SPÉCIFIQUE – SPEZIFISCHER TRÄGER – DOBOZTARTÓ


BMW R1200GS (2013)

N°	Descrizione	Caratteristiche	Codice	Quantità	
1	Piastra - Plate Platine - Platte Parrilla - Platni	Sp. 5mm - Alluminio	GL2357	1	
2	Supporto - Support - Support Halterung - Soporte - Tartó	Sp. 4mm - Fe360	GL2358	1	
3	Vite - Screw Vis - Schraube Tornillo - Csavar	TSCEI M8x25	825TSP	2	
4	Vite - Screw Vis - Schraube Tornillo - Csavar	TSCEI M6x40	640TSP	2	
5	Vite - Screw Vis - Schraube Tornillo - Csavar	TBEI M6x45	645TBEI	2	
6	Rondella - Washer Rondelle - Scheibe Arandela - Alátét	Ø6	6RON	2	
7	Dado - Bolt - Ecrou Mutter - Tuerca - M6 Anya	Auto Bloccante Flangiato Ribassato M6	6DADIABFN	2	
8	Dado - Bolt - Ecrou Mutter - Tuerca - M6 Anya	Auto Bloccante Flangiato M6	6DADIAFLN	2	
9	Dado - Bolt - Ecrou Mutter - Tuerca - M8 Anya	Auto Bloccante Flangiato M8	8DADIAFLN	2	
10	Distanziale - Spacer Entretoise - Distanztueck Distanciador - Távtartó	Ø14x10 Foro 6.5mm	V683	4	

SRA5108 - KRA5108

PORTAPACCO SPECIFICO - SPECIFIC HOLDER - PORTE-PAQUET SPÉCIFIQUE - SPEZIFISCHER TRÄGER - DOBOZTARTÓ


BMW R1200GS (2013)

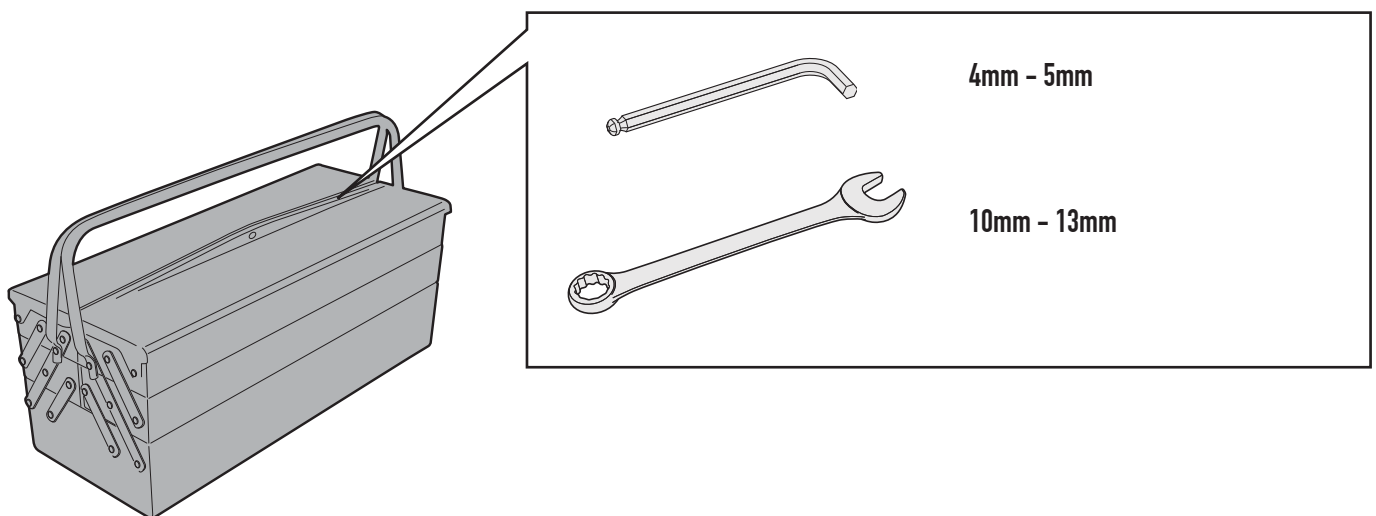

SRA5108 - KRA5108

PORTAPACCO SPECIFICO - SPECIFIC HOLDER - PORTE-PAQUET SPÉCIFIQUE - SPEZIFISCHER TRÄGER - DOBOZTARTÓ

BMW R1200GS (2013)

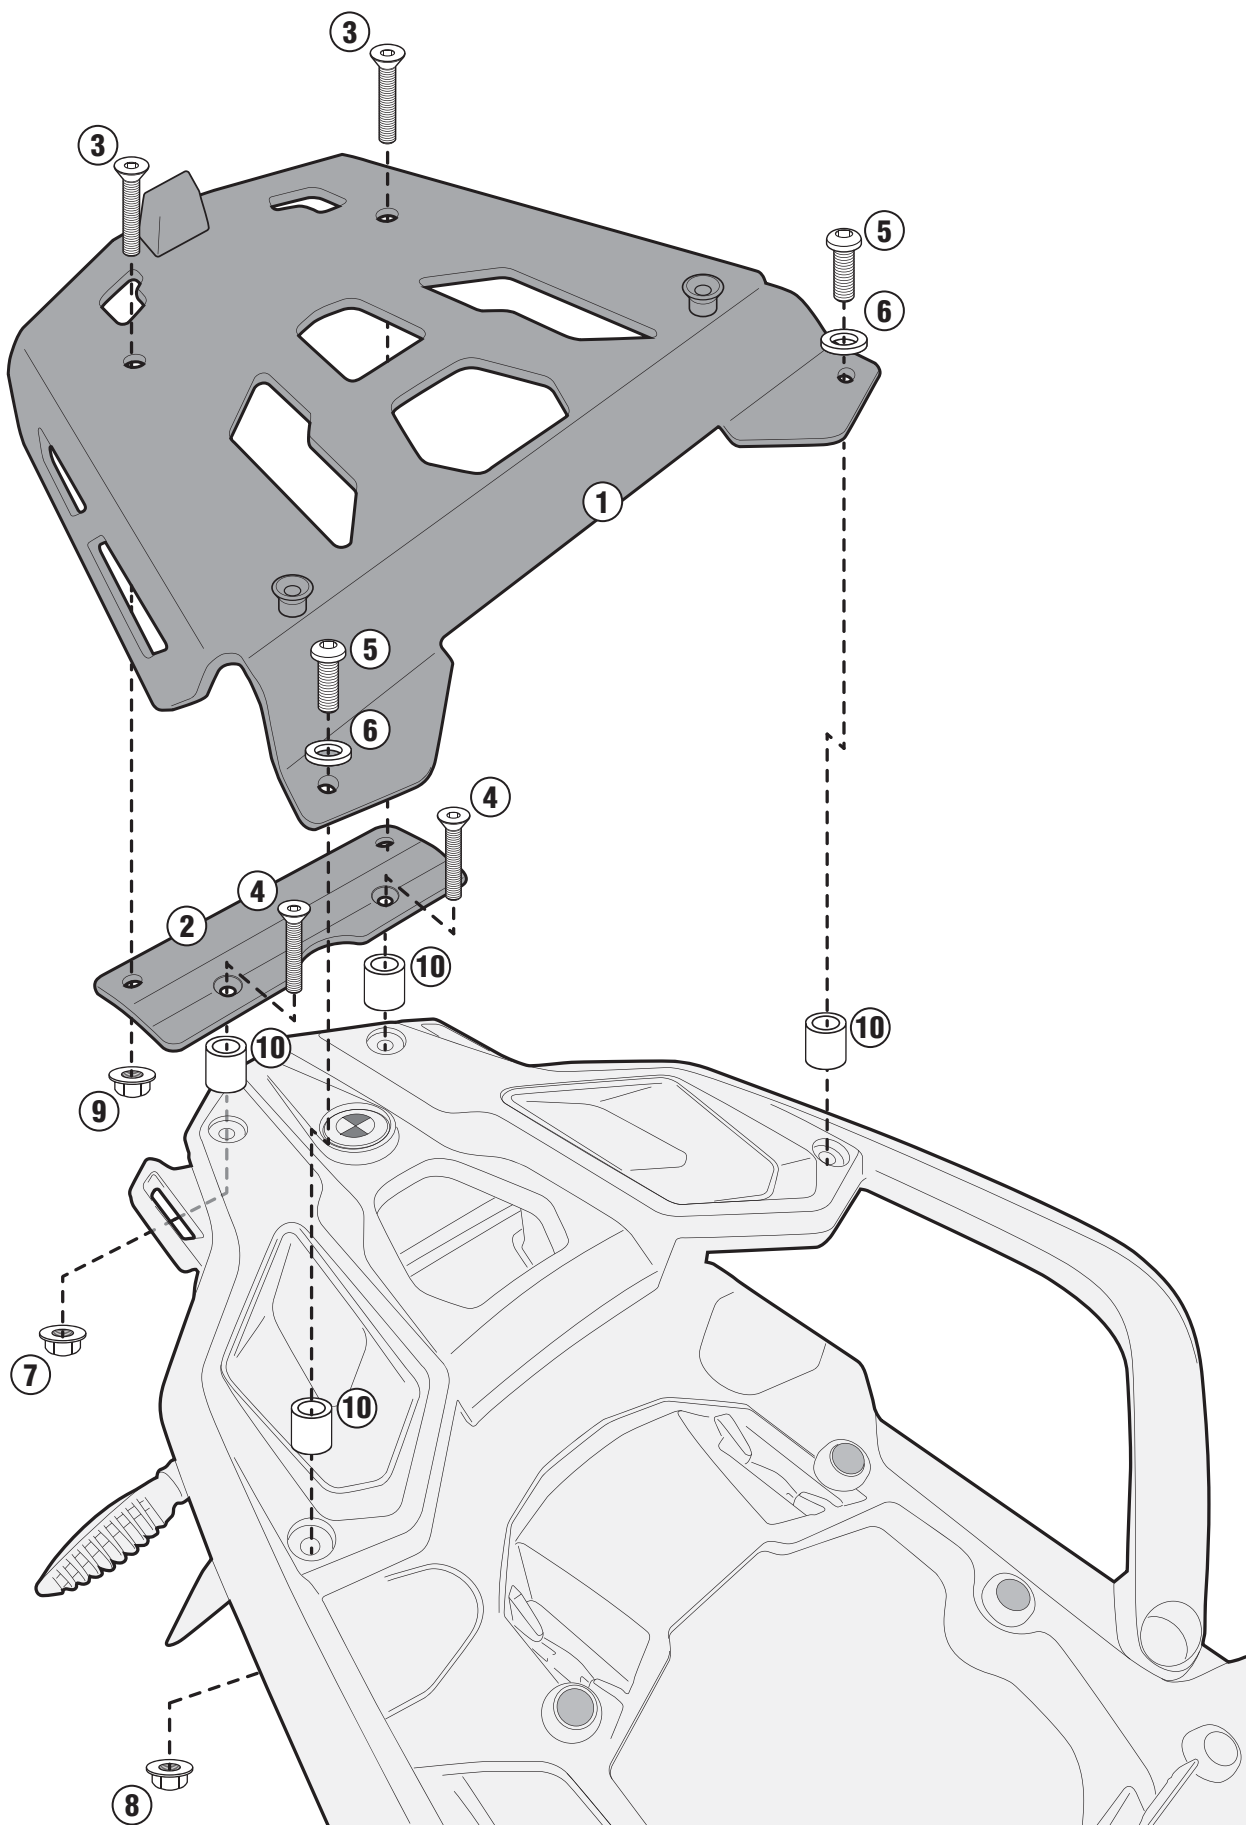

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS
INSTRUCTIONS DE MONTAGE - BAUANLEITUNG
INSTRUCCIONES DE MONTAJE - FELSZERELÉSI ÚTMUTATÓ